
Subject: Re: Level crossing default parameters / Standardwerte bei

Posted by [christian.rahmig](#) on Fri, 16 Mar 2018 07:42:23 GMT

[View Forum Message](#) <> [Reply to Message](#)

Dear all,

Am 12.03.2018 um 16:45 schrieb Christian Rahmig:

> [...]

> @length="0"

>

> @angle="90"

>

> @protection="none"

>

> I created a Trac ticket [1] for the topic to be solved until release of

> railML 2.4.

>

> [1] <https://trac.railml.org/ticket/323>

All three default values have been removed. The ticket has been closed.

Best regards

Christian

--

Christian Rahmig - Infrastructure scheme coordinator

railML.org (Registry of Associations: VR 5750)

Phone Coordinator: +49 173 2714509; railML.org: +49 351 47582911

Altplauen 19h; 01187 Dresden; Germany www.railml.org
