

---

Subject: Crossings

Posted by [claus.messauer](#) on Wed, 31 Mar 2004 07:03:21 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hello,

I have a question concerning crossings. In the infrastructure scheme version 0.93, crossings could be defined with the element junction (enumeration type: simpleSwitch, simpleCrossing, simpleSwitchCrossing, double switchCrossing). Where can I define crossings in the scheme 0.94?

I think there is a little mistake in the technical reference. Possible types of a block are man (in the reference main), auto and LZB.

Best regards

Claus

---